



## **ASSEMBLY & USE INSTRUCTION FOR PRELIT HINGED TREE**

THESE INSTRUCTIONS ARE FOR YOUR SAFETY. PLEASE STUDY ALL INSTRUCTIONS AND WARNING LABELS BEFORE USING AND RETAIN FOR FUTURE REFERENCE.

### **Caution:**

- Product is intended for indoor use only.
- Always insert the power-plug into an indoor mains socket.
- Do not use this product for any other purpose than its intended use.
- Never place the product near a wet location.
- Do not allow the product near/ contact with a source of heat or flame, e.g., gas or electric heaters, fireplaces, candles, or other similar heat sources.
- Do not cover the product with cloth, paper, or any other material not part of the product when in use, for example, curtains, nets, or bedding.
- Do not connect the product to the power supply while the product is in the packaging.
- Do not connect the light set to any other light set by cutting or joining the sets together.
- Unplug the light chain (if any) when leaving the house, when retiring for the night, or if unattended.
- Do not secure the wiring with sharp hooks or nails. This can cut or damage the wire insulation.
- The external flexible cable or cord cannot be replaced. If part of light set or cable is damaged, the product MUST be destroyed.
- This product is for decoration use only. Not to be used by children as a toy and watch over them when near the tree.
- Ensure tree is stable, place on a firm and level surface, away from where it may be knocked and do not overload with excessively heavy decorations.
- Keep out of reach of small children and pets.
- To avoid the risk of fire, burns, personal injury, and electric shock it should not be played with or placed where small children can reach it.
- IF YOU ARE IN ANY DOUBT ABOUT INSTALLING THIS PRODUCT, CONSULT A QUALIFIED ELECTRICIAN.

### **Before You Start:**

1. Study the Caution carefully.
2. Decide on an appropriate location for your product, make sure that you have plenty of space, a level surface and a clean dry area for assembly and locate. Always try to assemble the product as close as possible to the intended location.
3. Check the pack and make sure you have all the parts.
4. Remove all plastic bags and dispose of safely.
5. Retain the instructions for future use.

### **Assembly:**

1. Choose a location where the tree is to be displayed. Take out the tree stand, pull apart the legs of stand so that they are "X" shaped as Fig. 1, place it on a flat surface.
2. Insert the bottom tree section into the tree stand and tighten the 3 screws on the stand.
3. Insert the middle tree section into the bottom tree section and push down into position, as shown Fig. 2.
4. Insert the tree-top into the middle tree section and push down into position, as shown Fig. 2.

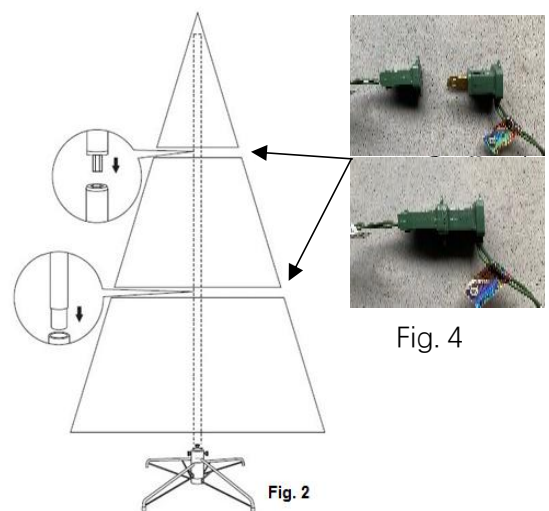


Fig. 4

Fig. 2

5. The branches are hinged on the bottom and middle sections, and will fold down automatically into the pre-designed angles, as shown Fig. 3.
6. Fit the cable connectors together, one set between the tree-top and the middle tree section, and the other set between the middle tree section and the tree-bottom. Ensure the connectors are securely tightened (per Fig 4).
7. Finally shape the tree by arranging the tips on the branches to give the desired effect. Some tree styles have “side branches” attached to the main branch stem that require additional shaping as shown Fig. 5. After shaping the complete tree, the finished look should be natural and full.
8. Put the power plug at the bottom of the whole tree into an INDOOR mains socket to turn on the lights.

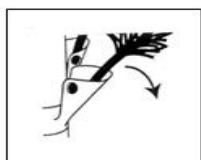


Fig. 3



Fig. 5

#### **Care & Use:**

- Before using or re-using, inspect the product carefully. Throw away the products if any parts damaged or frayed wire insulation or cords, loose connections, or exposed copper wire.
- Before storing the product, carefully remove the product from wherever it is placed to avoid undue strain or stress on the product conductors, connections, and wires.

#### **Storage:**

1. Unplug the light-chains from the mains socket and remove all decorations from the tree.
2. Gently disconnect the cable connectors.
3. Gently lift off the tree-top and middle and bottom sections and remove the tree stand.
4. Carefully place the tree in its box and tape it shut.
5. STORE THE PRODUCT IN A COOL AND DRY LOCATION PROTECTED FROM SUNLIGHT AND WHERE THE TEMPERATURE DOES NOT EXCEED 40 Celsius degrees.

#### **Trouble shooting:**

If the product does not work properly, check these connections:

- Make sure that the product is securely plugged to the power supply.
- Check that the cable connectors are securely connected.

#### **Disposal and recycling:**

- Waste electrical products should not be disposed of with
- Please recycle where facilities exist. Check with your local for recycling advice.



household waste.  
authority or retailer

—end—