



ASSEMBLY & USE INSTRUCTION FOR HINGED TREE

THESE INSTRUCTIONS ARE FOR YOUR SAFETY. PLEASE STUDY ALL INSTRUCTIONS AND WARNING LABELS BEFORE USING AND RETAIN FOR FUTURE REFERENCE.

Caution:

- Product is intended for indoor use only.
- Do not use this product for any other purpose than its intended use.
- Do not allow the product near/ contact with a source of heat or flame, e.g., gas or electric heaters, fireplaces, candles, or other similar heat sources.
- Unplug the light chain (if any) when leaving the house, when retiring for the night, or if unattended.
- This product is for decoration use only. Not to be used by children as a toy and watch over them when near the tree.
- Ensure tree is stable, place on a firm and level surface, away from where it may be knocked.
- Keep out of reach of small children.

Before You Start:

1. Study the Caution carefully.
2. Decide on an appropriate location for your product, make sure that you have plenty of space, a level surface and a clean dry area for assembly and locate. Always try to assemble the product as close as possible to the intended location.
3. Check the pack and make sure you have all the parts.
4. Remove all plastic bags and dispose of safely.
5. Retain the instructions for future use.

Assembly:

1. Choose a location where the tree is to be displayed. Take out the tree stand, pull apart the legs of stand so that they are "X" shaped as Fig. 1, place it on a flat surface.
2. Insert the bottom tree section into the tree stand and tighten the 3 screws on the stand.
3. Insert the middle tree section into the bottom tree section and push down into position, as shown Fig. 2.
4. Insert the tree-top into the middle tree section and push down into position, as shown Fig. 2.
5. The branches are hinged on the bottom and middle sections, and will fold down automatically into the predesigned angles, as shown Fig. 3.
6. Finally shape the tree by arranging the tips on the branches to give the desired effect. Some tree styles have "side branches" attached to the main branch stem that require additional shaping as shown Fig. 4. After shaping the complete tree, the finished look should be natural and full.

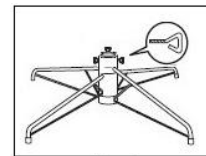 


Fig.1

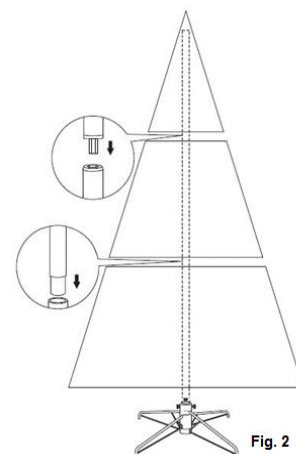 


Fig. 2

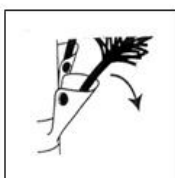 


Fig. 3



Fig.4

Care & Use:

- Before using or re-using, inspect the product carefully. Throw away the products if any parts damaged or frayed wire insulation or cords, loose connections, or exposed copper wire.
- Before storing the product, carefully remove the product from wherever it is placed to avoid undue strain or stress on the product conductors, connections, and wires.

Storage:

1. Unplug the light-chains from the mains socket and remove all decorations from the tree.
2. Gently disconnect the cable connectors.
3. Gently lift off the tree-top and middle and bottom sections and remove the tree stand.
4. Carefully place the tree in its box and tape it shut.
5. STORE THE PRODUCT IN A COOL AND DRY LOCATION PROTECTED FROM SUNLIGHT AND WHERE THE TEMPERATURE DOES NOT EXCEED 40 Celsius degrees.

Disposal and recycling:

- Waste electrical products should not be disposed of with household waste.
- Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.



—end—